

# FLOOR PRO FLOW

flooring contractor software · floorprofflow.com

## Floor Pro Flow — Square Footage & Waste Factor Cheat Sheet

### Common room sizes (sqft)

- 10 x 10 = 100 sqft      12 x 12 = 144 sqft
- 12 x 14 = 168 sqft      12 x 16 = 192 sqft
- 14 x 16 = 224 sqft      16 x 20 = 320 sqft
- 20 x 24 = 480 sqft      24 x 28 = 672 sqft

### Waste factors by pattern

- Straight lay (LVP, planks):      8 – 10 %
- Diagonal lay:                      15 – 18 %
- Herringbone / chevron:              20 – 25 %
- Pattern carpet / borders:              15 – 20 %
- Sheet vinyl seams (12 ft roll):      10 – 12 %

### Box coverage quick reference

- LVP 7" x 48":                      ~24 sqft / box
- Engineered hardwood 5" x 48":      ~22 sqft / box
- Solid hardwood 3 1/4":              ~20 sqft / box
- Laminate 7" x 48":                  ~22 sqft / box
- Porcelain tile 12" x 24":              ~16 sqft / box

### On-site checklist

- Measure each room L x W, sketch on graph paper
- Add up sqft, then add waste factor
- Divide by box coverage, round up
- Add 1 spare box for callbacks / future repair

Floor Pro Flow's Quick Quote does this math for you on the in-home measure — punch in sqft + SKU and get a low/high price range in seconds. Visit [floorprofflow.com](http://floorprofflow.com).